

Before you begin

Before you begin the configuration, make sure that you have completed the following steps:

- Your printer should be set up, connected to the network, and turned on. See your printer's user manual for information about setting up and turning on the printer.
- The Tektronix driver for your printer should be installed on every Macintosh and PC that will send print jobs to the printer. For details on driver installation, see the manual that is shipped with your printer's drivers and utilities diskettes.

Note *The PhaserShare AppleTalk connection works with Macintosh system software 6.0.7, 7.0, 7.1, and 7.5.*