

# Xerox® Office Product Serial Number Guide

## Xerox® CopyCentre®

Product	Location
CopyCentre C118	Inside cover A; on left side
CopyCentre C123	Inside cover A; on left side
CopyCentre C128	Inside cover A; on left side
CopyCentre C133	Inside cover A; on left side
CopyCentre C20	Open side cover, then open the front door; on panel above toner cartridge

## Xerox® DocuPrint®

Product	Location
DocuPrint N2125	Inside back cover on lower right side under the fuser
DocuPrint N3225	Inside left door under tray 1 on lower left corner
DocuPrint N4025	Inside left door under tray 1 on lower left corner
DocuPrint N4525	Behind front cover on lower printer frame

## Xerox® FaxCentre®

Product	Location
FaxCentre 2121	On the back; lower right corner
FaxCentre 2218	Open side cover, then open the front door; on panel above toner cartridge
FaxCentre F110	On the back; in the middle
FaxCentre F116	On the back; lower left corner

## Xerox® ColorQube®

Product	Location
ColorQube 8870	Front door; below maintenance kit
ColorQube 8570	Door A; right side
ColorQube 8700	Tray 2; left side
ColorQube 8900	Tray 2; left side
ColorQube 9201/02/03	Front door; bottom right
ColorQube 9301/02/03	Front door; bottom right

## Xerox® Phaser®

Product	Location
Phaser 2135	Open top cover; look to the right of fuser
Phaser 7300	Open top cover; look to the right of fuser
Phaser 7400	Open top cover; look to the right of fuser
Phaser 3040	Outside of rear door
Phaser 3100MFP	On the back of the printer in the middle
Phaser 3124	On the back; lower left corner
Phaser 3130	On the back of the printer
Phaser 3150	On the back of the printer
Phaser 3200MFP	On the back; lower left corner
Phaser 3250	On the back of the printer
Phaser 3260	On the back of the printer
Phaser 3300MFP	On the back; in the middle
Phaser 3320	Inside front door
Phaser 3330	On the back of the printer
Phaser 3400	Open top cover; on left side
Phaser 3450	Open top cover; on left side
Phaser 3500	Open top cover; on left side
Phaser 3600	Open top cover; on right side
Phaser 3610	On the back; in the middle
Phaser 3635MFP	On the back of the printer
Phaser 4400	Inside back cover on lower right side, under the fuser
Phaser 4500	Remove lower tray; look on the frame
Phaser 4510	Remove lower tray; look on the frame
Phaser 4600	Inside MPT door; on right side
Phaser 4620	Inside MPT door; on right side
Phaser 4622	Center of rear cover
Phaser 5400	Open MBF door; on left side of frame
Phaser 5500	Open Door A; on left side
Phaser 5550	Open Door A; on left side
Phaser 6010	Side cover; below toner cartridges
Phaser 6020	Side cover; below toner cartridges
Phaser 6022	Side cover; below toner cartridges
Phaser 6100	Inside front cover; to the left of the waste cartridge
Phaser 6110	Inside front cover; on left side
Phaser 6110MFP	Inside front cover; on left side
Phaser 6115MFP	Open top cover; in middle
Phaser 6120	Open top/front cover; on printer frame next to imaging unit
Phaser 6121MFP	Open top cover; left side.
Phaser 6125	Front cover
Phaser 6128MFP	Door A; to the right of the fuser.

# Xerox® Office Product

## Serial Number Guide

### Xerox® Phaser® (continued)

Product	Location
Phaser 6130	Inside Front Door; left side
Phaser 6140	Inside Front Door; left side
Phaser 6180	Inside front cover; on right side
Phaser 6180MFP	Inside front cover; on right side
Phaser 6200	Open top/front cover; on printer frame next to imaging unit
Phaser 6250	Open top/front cover; on printer frame next to imaging unit
Phaser 6280	Door A; right hand side
Phaser 6300	Open Door A; on left side
Phaser 6350	Open Door A; on left side
Phaser 6360	Open top/front cover; on printer frame next to imaging unit
Phaser 6500	Front cover; left side of fuser hatch.
Phaser 6510	Back of printer
Phaser 6600	Back of printer
Phaser 6700	Open left hand door; on right side below fuser
Phaser 740	Inside front door
Phaser 740L	Inside front door
Phaser 750	Inside front door
Phaser 7100	On printer frame under paper tray
Phaser 7500	Left door; right side of frame
Phaser 7700	Open front access door, near the left door hinge
Phaser 7750	Open front access door, near the left door hinge
Phaser 7760	Open front access door, near the left door hinge
Phaser 7800	Open left hand door; on left side below fuser
Phaser 8200	Inside front cover; on left side
Phaser 8400	Behind front cover on lower printer frame
Phaser 8500/8550	Behind front cover on lower printer frame
Phaser 8560	Behind front cover on lower printer frame
Phaser 8560MFP	Inside front cover; on right side
Phaser 8860	Behind front cover on lower printer frame
Phaser 8860MFP	Inside front cover; on right side

### Xerox® VersaLink®

Product	Location
VersaLink B400	On the back; lower left corner
VersaLink B405	On the back; lower left corner
VersaLink C400	On the back; lower left corner
VersaLink C405	On the back; lower left corner

### Xerox® WorkCentre®

Product	Location
WorkCentre 3045	Outside of rear door
WorkCentre 3210	Center of rear cover
WorkCentre 3215	On the back of the printer
WorkCentre 3220	Rear cover
WorkCentre 3225	On the back of the printer
WorkCentre 3315	Inside front door
WorkCentre 3325	Inside front door
WorkCentre 3335	On the back of the printer
WorkCentre 3345	On the back of the printer
WorkCentre 3550	Rear cover
WorkCentre 3615	On the back; in the middle
WorkCentre 3655	Inside front cover; on right side
WorkCentre 4118	Open side cover, then open the front door; on panel above toner cartridge
WorkCentre 4150	On the back; lower left corner
WorkCentre 4250	Front door; right side
WorkCentre 4260	Open side cover, then open the front door; on panel above toner cartridge
WorkCentre 4265	Open side cover, then open the front door; on panel above toner cartridge
WorkCentre 5225	Inside cover A; on left side
WorkCentre 6015	Rear cover
WorkCentre 6025	Side cover; below toner cartridges
WorkCentre 6027	Side cover; below toner cartridges
WorkCentre 6400	Inside front door; Upper right hand corner
WorkCentre 6505	Front cover; left side of fuser hatch
WorkCentre 6515	Back of printer
WorkCentre 6605	Back of printer
WorkCentre 6655	Inside front cover; on right side
WorkCentre 7132	Inside cover A; on left side
WorkCentre 7232	Inside cover A; on left side
WorkCentre 7242	Inside cover A; on left side
WorkCentre C2424	Door A; just above door hinge
WorkCentre M118	Inside cover A; on left side
WorkCentre M118i	Inside cover A; on left side
WorkCentre M123	Inside cover A; on left side
WorkCentre M128	Inside cover A; on left side
WorkCentre M133	Inside cover A; on left side
WorkCentre M20	Open side cover, then open the front door; on panel above toner cartridge
WorkCentre M20i	Open side cover, then open the front door; on panel above toner cartridge
WorkCentre M24	Inside left top cover; on left side
WorkCentre PE120	On the back; lower left corner
WorkCentre PE16	On the back; in the middle
WorkCentre PE220	On the back; in the middle

Visit us on the web or ask your local Xerox provider about our comprehensive line of printers and multifunction printers.  
[www.xerox.com/office](http://www.xerox.com/office)

